

'Quad Cruise' Electronic Cruise & Spray Control for Polaris Sportsman Ute 570 2019



Quad Cruise is a new version of the MotorCycle Setup cruise control for vehicles with Throttle-By-Wire (TBW) electronic throttle systems.

It is designed to operate at speeds as low as 4 km/h (3mph) and up to 25 km/h (15 mph). The "Quad Cruise" has been designed to provide power to any crop spray or other accessory fitted to the ATV (Quad) via an optional switched 10 amp fused outlet built into the cruise control wiring harness - either manually, or automatically when the cruise control is engaged.

The cruise control can be set to a specific speed to spray a row by pressing the SET button, and turned off at the end of the row with the brake lever. The RES button can be used to set the vehicles' speed back to the previous speed. The spray system will turn on and off with the cruise control, when the spray switch is in the AUTO position. Manual operation of the spray is possible when the spray switch is in the MANUAL position.

You can accelerate the vehicle further, if desired, by using the throttle pedal. When the throttle is released the cruise control will take over again at the previous set speed.



If the cruise control is disengaged, for example by applying the brake, it may be resumed by pressing the RES button. The vehicle will accelerate or decelerate to the previous set speed provided the vehicle is still travelling between about 3 kph (2mph) and about 25 kph (15mph). The cruise control will not engage outside these speed limits so it is not possible to accidentally engage the cruise control when the vehicle is stationary.

To increase the set speed while the cruise control is engaged, the SET button may be pressed and held. The speed will gradually increase until the button is released. The speed control will then maintain the new speed. Alternatively the 'Tap up' feature allows the speed to be increased each time the SET button is momentarily pressed.

To decrease the set speed the RES button may be used in the same way as the SET button, but this will reduce the speed instead of increasing it.

The amount the speed changes with the 'Tap Up' and 'Tap Down' function is selectable. The standard setting is 0.5 kph per press, but this can be changed from 0.5 mph per press down to 0.01kph in several steps in both kph and mph increments.

Once the desired speed is SET for a particular application, this speed can also be 'locked' if desired so the operator cannot accidentally change the SET speed. The operation to 'lock' and 'unlock' the SET speed takes 5 seconds and is done using the cruise control switch. When the speed is 'locked' it is retained in memory permanently even if the vehicle is turned off. This function is useful when a precise and repeatable speed is required for spraying for example, and once SET you do not want it to be changed accidentally.

Every effort has been made to make the cruise control waterproof. The new computer is fully sealed. Wherever possible sealed connectors have been used on the wiring harness.

The following provides a brief description of the power consumption and component locations of the MotorCycle Setup electronic cruise and spray control.


The cruise control draws minimal current from the vehicle, typically less than 0.3 Amp. By comparison, a head light bulb typically draws about 4 amps (55 Watts), and a tail light bulb (running light) draws about 0.4 amp (5 Watts).

Installed weight of the cruise control is approximately 1kg.

Refer to the line drawing on the back of this sheet to identify the component numbers in the text.



The **Computer (1)** is mounted in the headlight/dashboard nacelle, beside the instrument cluster.

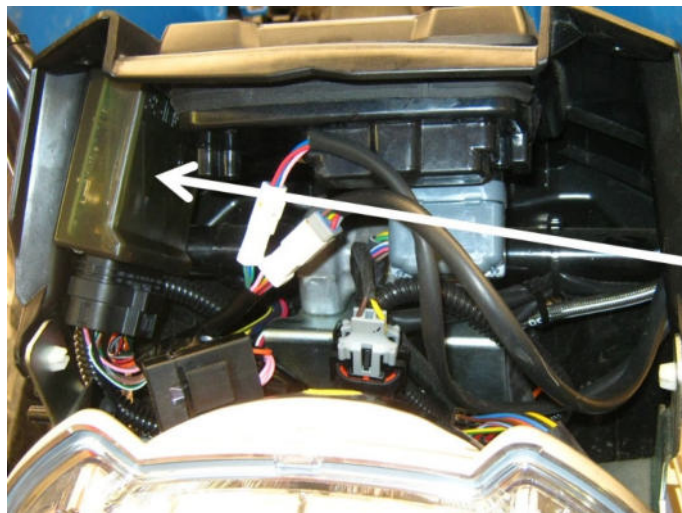

The **Control Switch (2)** is mounted on left handlebar, on one of the bolts that hold the brake lever to the handlebar. This photo shows the control switch with the optional spray power control switch (2a on the parts drawing below). If the cruise is ordered without the optional spray power control, this switch is not included (2b on the drawing).



The **Wiring Harness (3)** has the same type of plugs or terminals that are already used on the vehicle. Power and CAN-BUS signals are sourced from the vehicle's CAN-BUS diagnostic plug. Brake sensing for the cruise control is sourced from the vehicle's rear brake light switch connection. This connection is used to get a direct brake signal to the cruise control for safety purposes. Road speed signal, front and rear brake signal and neutral gear selection detection are all sourced from the vehicle's CAN-BUS system. The cruise control connects the vehicle's Accelerator (throttle trigger) Position Sensor (APS). This connection is used to operate the bike's throttle. The connectors, terminals and seals used on this harness are the same type as used on the motorcycle's original connectors to ensure that an OE quality connection is maintained. There is no cutting or splicing of wires required anywhere in the installation of the cruise control kit.

Power for the **OPTIONAL Spray Power Harness (4)** is sourced from the positive and ground terminals on the power bus bar at the front of the vehicle and a two-pin plug is provided that can be mounted anywhere on the vehicle for connection to the spray system or other powered accessory. Matching plug and terminals are provided in the kit for connection to the spray unit. Any accessory drawing less than 10 amps may be connected to this outlet.

MotorCycle Cruise Controls

AUSTRALIA

Web Site:

<http://www.mccruise.com>

International:





Phone (International Access Code) 61 3 9808 2804

Australia:

Phone (03) 9808 2804

E-mail:

sales@mccruise.com

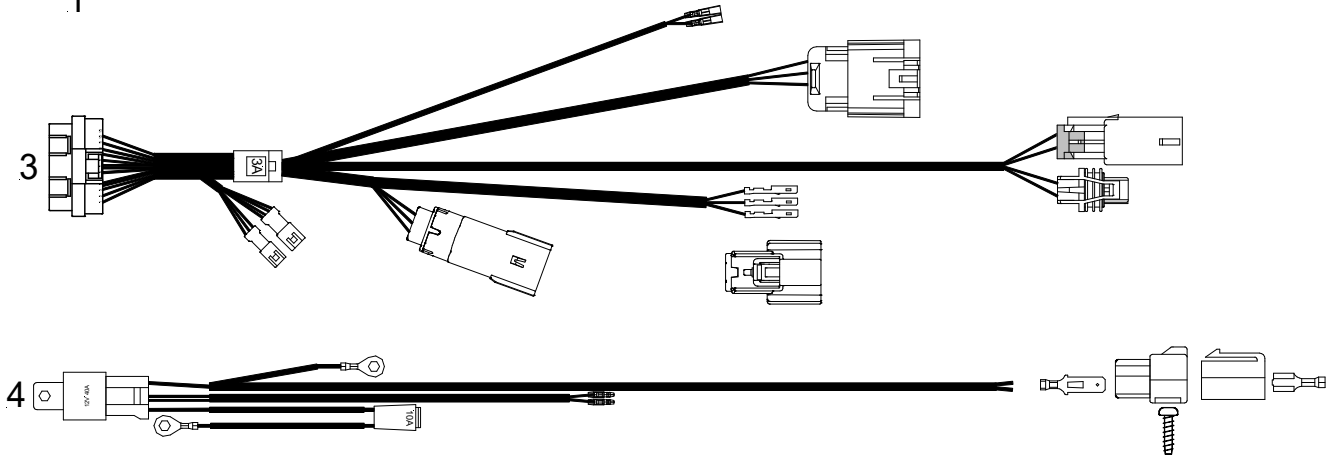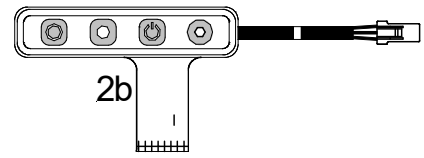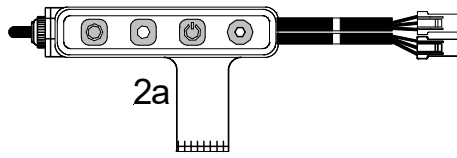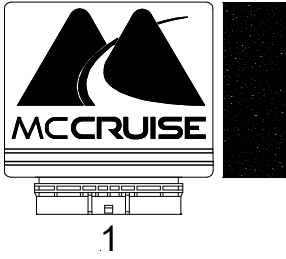

MotorCycle Cruise Controls

AUSTRALIA

Web Site:

<http://www.mccruise.com>

International:

Phone (International Access Code) 61 3 9808 2804

Australia:

Phone (03) 9808 2804

E-mail:

sales@mccruise.com