



STEP 1: CUT OUTER CABLE TO LENGTH.
USE FINE-TOOTHED HACKSAW OR
SHARP CUTTERS.

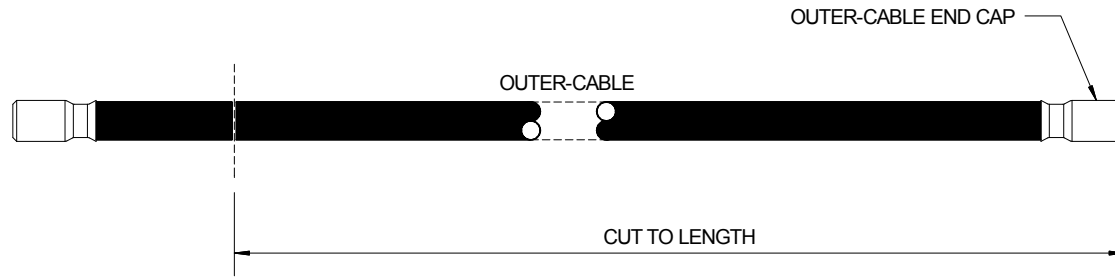

STEP 2: INSERT INNER-ROPE CABLE.
ENSURE BALL NIPPLE IS AT CAP END.
PULL THROUGH ALL THE WAY.



STEP 3: INSTALL CABLE ADJUSTOR.
ENSURE ADJUSTOR IS SEATED FIRMLY.
INSTALL WIRE RING CLIP.

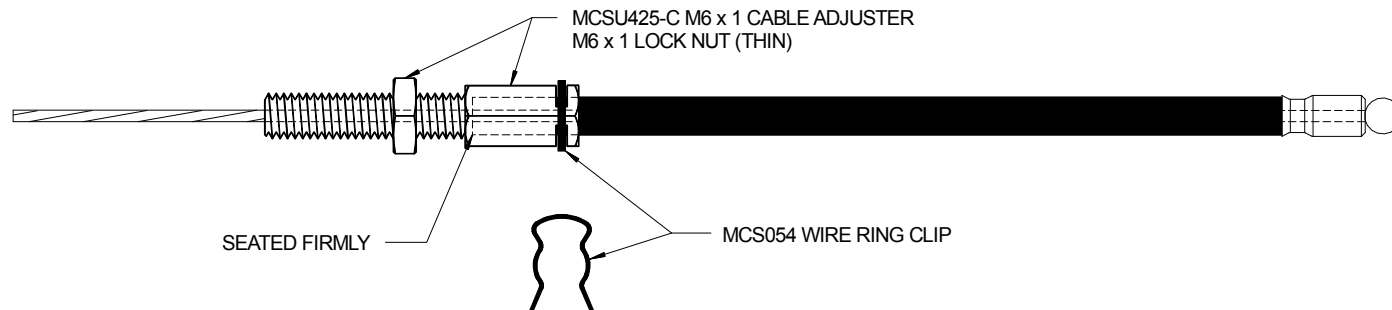

ALL DIMENSIONS IN MM

